



WEDGE BACKPLATE ASSEMBLY


1 Please verify that the wall where the backplate will be installed is smooth. If not, apply adhesive cement or a similar construction material in order to adapt the irregularities of the wall.

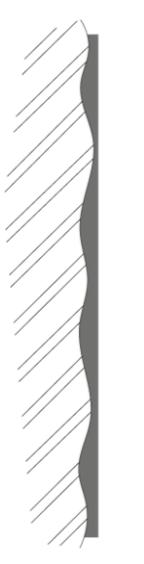


2 Drill the wall. The drill pattern can be used to make the holes – in such case, please pay attention to the path of the cables. Insert the expandable plugs.

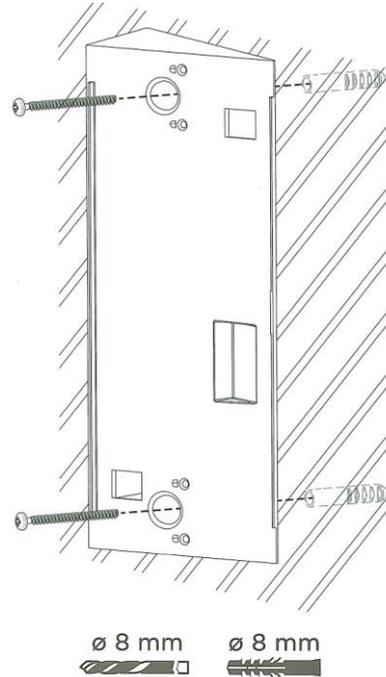

3 Fix the basic module to the backplate by means of the screws supplied with the first one.

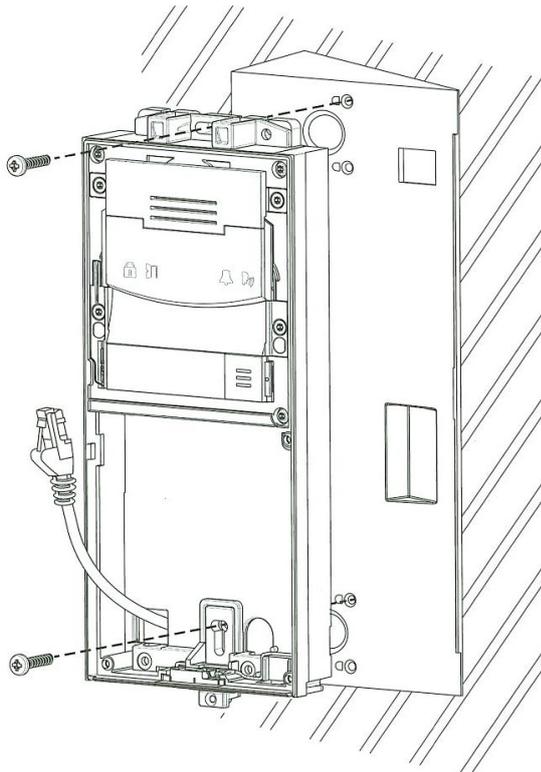

4 Place and fix the Surface Frame ZVP-CB2M with the Allen key.

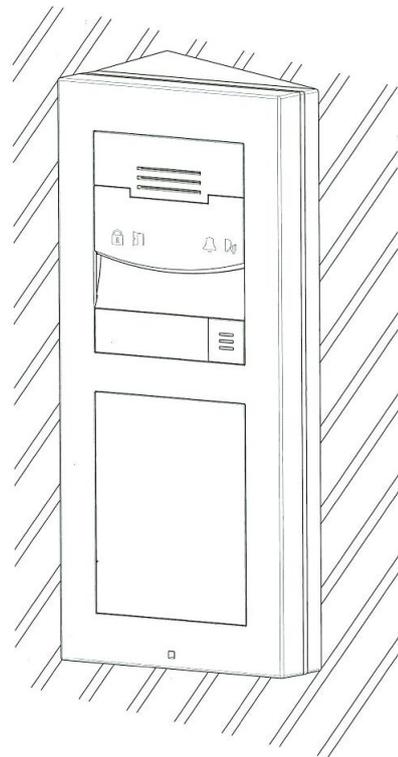

DRILL PATTERN

